

Special skirting tape for PVC skirting

# Remur

## Installing PVC skirting securely

### Applications:

Metal-reinforced special system for the dimensionally stable installation of flexible PVC skirting on smooth substrates. Remur allows quick and clean working without solvents. For interior areas only. Remur meets the TRGS 610.

#### ► Suitable skirting:

- Flexible PVC skirting with smooth backing (such as DÖLLKEN WL 50/WL 60/WL 100)
- PVC cove formers with smooth backing (except: stair nosing profiles)
- For common building applications in interior areas
- Request application consulting for other materials

#### ► Suitable substrates:

- Masonry
- Smooth plaster
- Painted surfaces
- Metal
- Plastics
- Wood
- Concrete
- Ceramics
- Gypsum (primed)
- Levelling compound

Article	Tape width	Skirting height
Remur 45	45 mm	50 mm
Remur 55	55 mm	60 mm
Remur 95	95 mm	100 mm



for PVC skirting  
ON smooth substrates

**Ingredients:** Metal-reinforced special film carrier, Acrylate copolymers, Wetting and anti-foaming agent, Paper.

### Product features & properties:

- Dimensionally stable
- Avoids use of contact adhesive
- No prior fitting and priming
- 3 – 5 times faster
- Solvent-free / complies to TRGS 610 (technical regulations for dangerous substances)
- Will not dry out or become brittle
- EMICODE EC1 PLUS / very low emission

### Technical data:

Packaging:	carton
Width of rolls:	45 mm / 55 mm
Length of rolls:	50 m
Shelf life:	min. 2 years
Colour:	silver
Working temperature:	min. 18 °C
Open time:	none
Working time:	none
Set to traffic:	immediately after installation
Welding:	immediately after installation


## INSTALLATION INSTRUCTIONS

### Note for preparation:

- ▶ The substrate must be permanently dry, hard, load-bearing, level, free from grease, dust and silicon, in accordance with the respective national standards (EN, DIN, VOB, OE, SIA).
- ▶ Acclimatisation: Allow skirting and Remur to acclimatise over 24 hours at min. 18°C in the room.
- ▶ Wallpaper must be cut/removed for the area covered by the skirting.
- ▶ Dust binding: Bind dust with a solvent-free primer (e.g. UZIN PE 260).
- ▶ PVC cove formers, PVC soft skirting as well as the backing of floor coverings must be free from dust, dirt and grease. Clean well and rub dry with a clean rag.

### The following is needed:

- ▶ Remur, carpet knife, stair iron, rubber mallet, super glue, hair dryer, rag



### Tips for processing:

- ▶ Do not place rolls on the cut area without round protective sheet.
- ▶ Remur can also be used to install upright wall coverings (concave moulding work)

- 1 ▶ Clean backing




- 2 ▶ Place round protective sheet on unwinding plate  
▶ Place Remur on round paper sheets



- 3 ▶ Apply Remur with the help of the unwinding plate 2 mm from the floor covering to the wall and rub firmly



- 4 ▶ Pull off protective paper section by section up to approx. 20 cm before the corner  
▶ Install PVC skirting (without stressing) up to approx. 20 cm before the corner

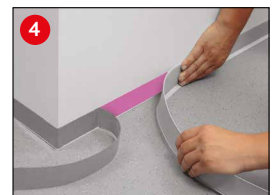

- 5 ▶ Knock along the entire PVC skirting with rubber mallet and reheat with the hot air gun, if necessary.



- 6 ▶ Heat inside/outside corners of the PVC skirting with the hot air gun and pre-shape  
▶ Remove protective paper, install PVC skirting (without stressing and cut if necessary) and knock along the entire PVC skirting with rubber mallet.



- 7 ▶ Join combinations with super glue, avoid open joints.



### Important notes:

Store on protected cut surface dry, cool and without exposure to direct sunlight. For more information refer to [www.uzin.com](http://www.uzin.com) or contact +49 (0)731 4097-0

### Safety at work and environmental protection:

The product requires no particular measures to ensure safety at work. For reasons of workplace hygiene, we would recommend that you should not eat, drink or smoke while applying this product. Keep out of the reach of children.

### Disposal:

Empty shells and the cardboard packaging can be recycled. Material remnants can be disposed of as household waste.

### Warranty:

**UZIN grants a 5-year warranty for all properties claimed in the processing instructions.**

- Follow the generally acknowledged rules of the trade and of technology for the installation of floor covering of the respective applicable standards (EN, DIN, VOB, OE, SIA)

The warranty becomes void if:

- the product is exposed to unusual impact especially of chemical or mechanical nature.
- used or installed differently than stated in the installation instructions.
- Remur is used on stairs.
- Remur is exposed to moisture.
- Remur is used in vehicle manufacturing and operating theatres.